

JB
1735
BLANCPAIN
MANUFACTURE DE HAUTE HORLOGERIE

Your watch

DATE AND SECONDS, UNIDIRECTIONAL BEZEL, SELF-WINDING

CALIBRE 1315, UP TO 120-HOUR AUTONOMY.



5015-12B30



5015-3603C



5015E-1130

The **5015-3603C** and **5015E-1130** watch models are adjusted in the same way.

Kindly unscrew the crown (position A) before performing any corrections, and screw it in again once the watch has been adjusted.

THE CROWN HAS THREE DISTINCT POSITIONS:

Position A, crown in manual-winding position.

Position B, fast date-setting position: for rapid date adjustment.

Position C, crown pulled out to time-setting position, enabling adjustment of the hours and minutes.

Push the crown back in to position A once the adjustments have been made.

ONE-WAY ROTATING BEZEL:

Before beginning the dive, turn the bezel to line up the lozenge-shaped marker (◆) with the minute hand. Thanks to this operation, dive times and any other time measurements can be instantly read off on the bezel by referring to the trajectory of the minute hand.

IMPORTANT

For the water-resistance guarantee, see pages 2-3.

DUAL-PURPOSE BLANCPAIN TOOL

1. Correction stylus
2. Screwdriver for triple-blade safety folding clasp.

The adjustable tip of your Blancpain tool is initially turned to the “screwdriver” side to adjust the triple-blade safety folding clasp.

This tool also serves as a correction stylus when adjusting the settings on your watch. To do this, slide one finger into the notch and pull until the adjustable tip comes loose. Turn the tip to the “stylus” side and place it back in position with the sphere-shaped end facing the slot. Press it in with a slight rotating movement to secure it.



TRIPLE-BLADE FOLDING CLASP (WITH PRONG)

Only Blancpain straps specially designed for this folding clasp should be used. For your safety and comfort, we advise you to have your new clasp fitted by an authorised Blancpain retailer. You can always then adjust the length of the wristband yourself.

OPENING

To open the fastening, place one finger on each side of the clasp and pull it upwards (Fig. 1). Proceed in the same manner to open the other blade (Fig. 2).



Fig. 1



Fig. 2

CLOSING

Slip your Blancpain watch on your wrist and close the folding blades as indicated on figures 3 and 4.



Fig. 3



Fig. 4

ADJUSTING THE STRAP:

Slide the section of the strap into the clasp and insert the prong into the desired hole (Fig. 5). Move the prong to another hole if necessary.



Fig. 5

IMPORTANT

Please do not pull the end of the strap upward to open the fastening as the prong might come completely out of the hole, meaning the watch would no longer be held and might fall.

