

JB
1735
BLANCPAIN
MANUFACTURE DE HAUTE HORLOGERIE

Your watch

**FLYBACK CHRONOGRAPH, HOURS / MINUTES,
TACHYMETER SCALE, TWO-WAY ROTATING BEZEL,
SELF-WINDING**
CALIBRE F388B, UP TO 50-HOUR AUTONOMY.



AC01

THE CROWN HAS TWO DISTINCT POSITIONS:

Position A, crown in manual-winding position.

Position B, crown pulled out to time-setting position, enabling adjustment of the hours and minutes.

USING THE CHRONOGRAPH:

Pusher 1: starts the central chronograph seconds hand, as well as the hands on the hour and minute counters. A second press stops the chronograph function, while a third press restarts it.

Pusher 2: resets the central chronograph seconds hand as well as the hands on the hour and minute counters. This pusher serves to activate the flyback function when the central chronograph seconds hand is in operation.

FLYBACK FUNCTION:

The flyback function serves to reset the chronograph (pusher 2), followed by an instant restart, thus enabling the user to measure successive time intervals without needing to stop, reset and restart the chronograph.

TACHYMETER SCALE:

The tachymeter scale running around the chapter ring indicates speeds based on a 1 000-metre distance.

TWO-WAY ROTATING BEZEL:

The rotating bezel is adjusted in relation to the minute hand. It thus serves to count off a maximum 60-minute time-period. The "lozenge" symbol (◆) on the bezel indicates the time when this period will end.

By way of example: a pilot knows he has enough fuel to last him 30 minutes. He positions the number 30 on the bezel opposite the minute hand. When the latter reaches the "lozenge" (◆), these 30 minutes will have elapsed.

IMPORTANT

For the water-resistance guarantee, see pages 2-3.

DUAL-PURPOSE BLANCPAIN TOOL

1. Correction stylus
2. Screwdriver for triple-blade safety folding clasp.

The adjustable tip of your Blancpain tool is initially turned to the “screwdriver” side to adjust the triple-blade safety folding clasp.

This tool also serves as a correction stylus when adjusting the settings on your watch. To do this, slide one finger into the notch and pull until the adjustable tip comes loose. Turn the tip to the “stylus” side and place it back in position with the sphere-shaped end facing the slot. Press it in with a slight rotating movement to secure it.



TRIPLE-BLADE FOLDING CLASP (WITH PRONG)

Only Blancpain straps specially designed for this folding clasp should be used. For your safety and comfort, we advise you to have your new clasp fitted by an authorised Blancpain retailer. You can always then adjust the length of the wristband yourself.

OPENING

To open the fastening, place one finger on each side of the clasp and pull it upwards (Fig. 1). Proceed in the same manner to open the other blade (Fig. 2).



Fig. 1



Fig. 2

CLOSING

Slip your Blancpain watch on your wrist and close the folding blades as indicated on figures 3 and 4.



Fig. 3



Fig. 4

ADJUSTING THE STRAP:

Slide the section of the strap into the clasp and insert the prong into the desired hole (Fig. 5). Move the prong to another hole if necessary.



Fig. 5

IMPORTANT

Please do not pull the end of the strap upward to open the fastening as the prong might come completely out of the hole, meaning the watch would no longer be held and might fall.

