

**JB**  
**1735**  
**BLANCPAIN**  
MANUFACTURE DE HAUTE HORLOGERIE

Your watch



**MINUTE REPEATER CARROUSEL, CATHEDRAL GONG,  
ONE-OF-A-KIND EROTIC SCENE, SECURED MOVEMENT,  
HAND-WINDING**  
CALIBRE 232, UP TO 65-HOUR AUTONOMY.



**THE CROWN HAS TWO DISTINCT POSITIONS:**

**Position A**, crown in manual-winding position.

**Position B**, crown pulled out to time-setting position, enabling adjustment of the hours and minutes. The carousel cage takes one minute to turn; so the seconds can be determined around the perimeter of the aperture revealing the carousel.

The time-setting must be done in a clockwise direction in order to ensure that the indications respectively given by the hands and the striking mechanism agree. When the time is set in a counter-clockwise direction, bring the hands back to the correct time, then turn them one more hour backwards, before finally returning to the desired time. This manoeuvre is necessary in order to avoid a discrepancy between the indication given by the minutes hand and that given by the striking mechanism due to the gearing of the time-setting system.

Push the crown back in to position A after the adjustment.

**MINUTE REPEATER WINDING LEVER:**

- push the winding lever towards the 12 o'clock position and your watch will strike hours, quarter-hours and minutes;
- the winding lever travel will change depending on the hour shown.

**IMPORTANT**

So as to protect the movement and avoid breaking any parts during chiming, a disconnecting lever serves to keep the parts in place if the hands are moved while the watch is striking.

It is also important to await the end of the striking and above all the complete unwinding of the striking-mechanism gear train before reactuating the winding lever.

This model is not water-resistant.

# TRIPLE-BLADE SAFETY FOLDING CLASP

Only Blancpain wristbands specially designed for this folding clasp should be used. For your safety and comfort, we advise you to have your new clasp fitted by an authorised Blancpain retailer. You can always then adjust the length of the wristband yourself using the dedicated Blancpain tool supplied with your watch.



## Opening:

To open the clasp, press the side pushers while raising the cover (Fig.1). Pull upwards to open the 2nd blade (Fig. 2).



Fig. 1



Fig. 2

## Closing:

Slip the watch on your wrist. Replace the upper (12 o'clock) wristband section in position and press down with your thumb until it closes (Fig. 3). Proceed in the same way with the lower (6 o'clock) wristband section (Fig. 4).



Fig. 3



Fig. 4

### **Wristband length adjustment:**

Loosen the screw using the Blancpain tool supplied with the watch (Fig. 5).

Slide the wristband section into the clasp and insert the welded hollow cylindrical stud designed to house the screw into the required hole (Fig. 6). Place the screw back in position and tighten it using the Blancpain tool (Fig. 7-8).



*Fig. 5*



*Fig. 6*



*Fig. 7*



*Fig. 8*