

JB
1735
BLANCPAIN
MANUFACTURE DE HAUTE HORLOGERIE

Your watch



**DATE AND SECONDS, UNIDIRECTIONAL BEZEL,
SELF-WINDING**

CALIBRE 1151, UP TO 96-HOUR AUTONOMY.



5008

Kindly unscrew the crown (position A) before performing any corrections, and screw it in again once the watch has been adjusted.

THE CROWN HAS THREE DISTINCT POSITIONS:

Position A, crown in manual-winding position.

Position B, crown pulled out to fast date-adjustment position.

Position C, crown pulled out to time-setting position, enabling adjustment of the hours and minutes.

ONE-WAY ROTATING BEZEL:

Before beginning the dive, turn the bezel to line up the lozenge-shaped marker (◆) with the minute hand. Thanks to this operation, dive times and any other time measurements can be instantly read off on the bezel by referring to the trajectory of the minute hand.

IMPORTANT

For the water-resistance guarantee, see pages 2-3.

POWER RESERVE

Most Blancpain self-winding watches have a power reserve of between 40 and 288 hours. This implies wearing a watch throughout the day in normal conditions of activity.

If the movement has come to a halt, it is advisable to wind it manually by at least 40 turns of the crown. This operation serves to supply the watch with the minimum power reserve required before replacing it on the wrist. Models with a calendar, which changes around midnight, must have at least 20 hours' power reserve in order to drive the entire mechanism. Otherwise, the watch is liable to stop at around midnight.

WATER RESISTANCE

Most Blancpain models are water-resistant, apart from the minute repeater. This water resistance is necessary to protect the movement from dust and damp. While it is possible to swim with a water-resistant watch, the water-resistance guarantee does not exceed two years. Beyond this period, the water resistance may be compromised, leading to costly repairs. We therefore strongly recommend that you have your watch checked once a year by an authorised Blancpain watchmaker.

Watches equipped with screw-locking crowns, pushers and case-backs guarantee perfect watertightness to 100 metres. For any further information regarding the crowns and pushers, kindly refer to the operating instructions for your model.

WATER-RESISTANCE GUARANTEE FOR FIFTY FATHOMS:

These models have all successfully undergone water-resistance tests at equivalent to 300 metres for the Fifty Fathoms and to 1,000 metres for the 500 Fathoms. Blancpain recommends that you have the water resistance and the smooth running of your Fifty Fathoms regularly checked by your nearest authorised Blancpain After-Sales Service Centre.

WARNING

The Fifty Fathoms models are not professional diving instruments. They must be backed up where necessary by a professional diving computer.

The water-resistance value is expressed in bar. 1 bar corresponds to a 10-metre water column.

MOVEMENT MAINTENANCE

A mechanical watch needs good care and lubrication. Despite the excellent quality of the oils and materials used by Blancpain, we recommend that you entrust your watch to your Blancpain representative every five years to have it thoroughly cleaned and lubricated.

Through this regular maintenance, you will prevent unnecessary wear due to drying of the oils and thereby ensure your watch continues to run smoothly for years to come.

AFTER-SALES SERVICE

Regular maintenance of the movement driving your mechanical watch is one of the key guarantees of its longevity.

The quality of after-sales service is thus essential. Each watch that returns to our workshops therefore undergoes the same process of quality control and operational verification as that of a new watch. Due to the complexity of Blancpain movements, we advise that you deal exclusively with authorised Blancpain retailers.

Consult our website (www.blancpain.com) for a list of our retailers in each country.

SMOOTH OPERATION OF A MECHANICAL WATCH

Complicated adjustments and repairs must imperatively be performed by a watchmaker representing the Blancpain brand or directly in our head office workshops.

TRIPLE-BLADE FOLDING CLASP (WITH PRONG)

Only Blancpain straps specially designed for this folding clasp should be used. For your safety and comfort, we advise you to have your new clasp fitted by an authorised Blancpain retailer. You can always then adjust the length of the wristband yourself.

OPENING

To open the fastening, place one finger on each side of the clasp and pull it upwards (Fig. 1). Proceed in the same manner to open the other blade (Fig. 2).



Fig. 1

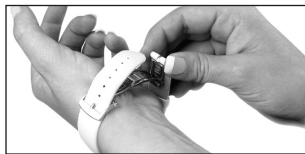


Fig. 2

CLOSING

Slip your Blancpain watch on your wrist and close the folding blades as indicated on figures 3 and 4.



Fig. 3



Fig. 4

ADJUSTING THE STRAP:

Slide the section of the strap into the clasp and insert the prong into the desired hole (Fig. 5). Move the prong to another hole if necessary.



Fig. 5

IMPORTANT

Please do not pull the end of the strap upward to open the fastening as the prong might come completely out of the hole, meaning the watch would no longer be held and might fall.