


JB
1735
BLANCPAIN
MANUFACTURE DE HAUTE HORLOGERIE

Your watch

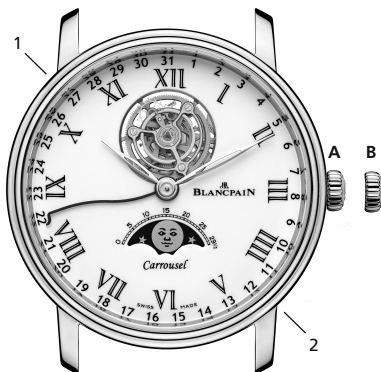

**MOON PHASES CARROUSEL, ONE-MINUTE FLYING
CARROUSEL, DATE, UNDER-LUG CORRECTORS,
SECURED MOVEMENT, SELF-WINDING
CALIBRE 225L, UP TO 5-DAY AUTONOMY.**



6622L



Under-lug corrector

THE CROWN HAS TWO DISTINCT POSITIONS:

Position A, crown in manual-winding position.

Position B, crown pulled out to time-setting position, enabling adjustment of the hours and minutes.

Push the crown back in to position A once the time has been set.

FAST CALENDAR ADJUSTMENTS:

Correctors 1 and 2 located beneath the case lugs enable adjustment of the date and the moon phases. They can be operated with one finger.

1. To adjust the date: corrector 1, located at 11 o'clock
2. To adjust the moon phases: corrector 2, located at 5 o'clock
Place the disc in the full-moon position, check the date of the last full moon using a lunar calendar and press corrector 2 the same number of times as the days that have elapsed since the last full moon.

TRIPLE-BLADE FOLDING CLASP (WITH PRONG)

Only Blancpain wristbands specially designed for this folding clasp should be used. For your safety and comfort, we advise you to have your new clasp fitted by an authorised Blancpain retailer. You can always then adjust the length of the wristband yourself.

OPENING

To open the fastening, place one finger on each side of the clasp and pull it upwards (Fig. 1). Proceed in the same manner to open the other blade (Fig. 2).



Fig. 1

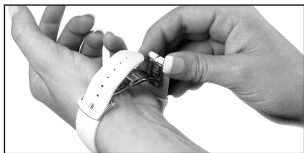


Fig. 2

CLOSING

Slip your Blancpain watch on your wrist and close the folding blades as indicated on figures 3 and 4.



Fig. 3



Fig. 4

ADJUSTING THE WRISTBAND:

Slide the section of the wristband into the clasp and insert the prong into the desired hole (Fig. 5). Move the prong to another hole if necessary.



Fig. 5