

**JB**  
1735  
**BLANCPAIN**  
MANUFACTURE DE HAUTE HORLOGERIE

Your watch



**8 DAY LARGE DATE WEEK INDICATION, SECONDS,  
WEEK, DAY AND DATE INDICATION, SELF-WINDING  
CALIBRE 3738G2, UP TO 8-DAY AUTONOMY.**



**6637**



Under-lug corrector

### **THE CROWN HAS THREE DISTINCT POSITIONS:**

**Position A**, crown in manual-winding position.

**Position B**, crown pulled out to fast date-adjustment position

**Position C**, crown pulled out to time-setting position, enabling adjustment of the hours and minutes and automatically stopping the seconds hand.

Push the crown back in to position A once the time has been set.

### **FAST CALENDAR ADJUSTMENTS:**

Under-lug correctors 1 and 2 serve to adjust the complete calendar and may be activated using a finger.

1. To adjust the day: corrector 2, located at 10 o'clock
2. To adjust the week: corrector 1, located at 2 o'clock

#### **IMPORTANT**

**It is inadvisable to perform fast corrections between 10pm and 0.30am. While such an operation would not cause any damage, it could compromise the accuracy of the indications.**

**Some years, such as 2020 and 2026, comprise 53 weeks according to official calendars.**

## TRIPLE-BLADE FOLDING CLASP (WITH PRONG)

Only Blancpain straps specially designed for this folding clasp should be used. For your safety and comfort, we advise you to have your new clasp fitted by an authorised Blancpain retailer. You can always then adjust the length of the wristband yourself.

### OPENING

To open the fastening, place one finger on each side of the clasp and pull it upwards (Fig. 1). Proceed in the same manner to open the other blade (Fig. 2).



*Fig. 1*



*Fig. 2*

### CLOSING

Slip your Blancpain watch on your wrist and close the folding blades as indicated on figures 3 and 4.



*Fig. 3*



*Fig. 4*

### **ADJUSTING THE STRAP:**

Slide the section of the strap into the clasp and insert the prong into the desired hole (Fig. 5). Move the prong to another hole if necessary.



*Fig. 5*

### **IMPORTANT**

**Please do not pull the end of the strap upward to open the fastening as the prong might come completely out of the hole, meaning the watch would no longer be held and might fall.**