


JB
1735
BLANCPAIN
MANUFACTURE DE HAUTE HORLOGERIE

Your watch

**ANNUAL CALENDAR WITH GMT, DOUBLE TIMEZONE,
SECONDS, UNDER-LUG CORRECTORS, SELF-WINDING
CALIBRE 6054F, UP TO 72-HOUR AUTONOMY.**

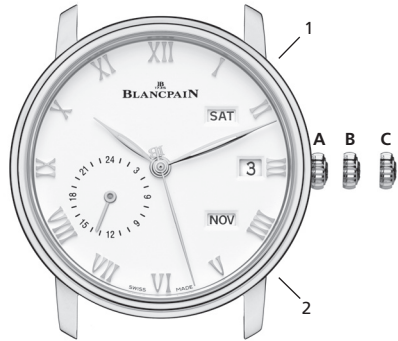

6670



6670A



Under-lug corrector

Watch model **6670A** is adjusted in the same way.

THE CROWN HAS THREE DISTINCT POSITIONS:

Position A, crown in manual-winding position.

Position B, time-difference and fast date adjustment position (only the hour hand turns in one-hour jumps): serves to adjust the date rapidly both backwards and forwards.

Warning: to move the date backwards via the GMT display, it is important to turn the hand backwards to 9 pm.

Position C, crown pulled out to the time-setting position: serves to correct the reference times (24-hour counter). In this position the seconds hand can be locked by turning the crown very slightly backwards, enabling the watch to be synchronised with an hour signal.

Push the crown back in to position A once the hands have been set.

CALENDAR OPERATING INSTRUCTIONS:

Correctors 1 and 2 located beneath the lugs serve to adjust the days and months and can be activated using a finger.

1. Adjust the desired day using corrector 1 at 1 o'clock
2. Adjust the desired month using corrector 2 at 5 o'clock.

It is not advisable to perform fast corrections between 9 pm and 1 am. While such an operation would not damage the movement, it nonetheless does not guarantee correct indications.

IMPORTANT

When adjusting the settings on your watch, it is important to always adjust first the date and the day, and then the month.

TRIPLE-BLADE FOLDING CLASP (WITH PRONG)

Only Blancpain straps specially designed for this folding clasp should be used. For your safety and comfort, we advise you to have your new clasp fitted by an authorised Blancpain retailer. You can always then adjust the length of the wristband yourself.

OPENING

To open the fastening, place one finger on each side of the clasp and pull it upwards (Fig. 1). Proceed in the same manner to open the other blade (Fig. 2).



Fig. 1

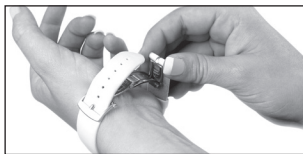


Fig. 2

CLOSING

Slip your Blancpain watch on your wrist and close the folding blades as indicated on figures 3 and 4.



Fig. 3



Fig. 4

ADJUSTING THE STRAP:

Slide the section of the strap into the clasp and insert the prong into the desired hole (Fig. 5). Move the prong to another hole if necessary.



Fig. 5

IMPORTANT

Please do not pull the end of the strap upward to open the fastening, or the prong may drop from the hole and damage the watch.