


JB
1735
BLANCPAIN
MANUFACTURE DE HAUTE HORLOGERIE

Your watch



**GMT ALARM WATCH, DOUBLE TIMEZONE, DATE, ALARM
POWER RESERVE INDICATION, SELF-WINDING
CALIBRE 1240H, UP TO 45-HOUR AUTONOMY**

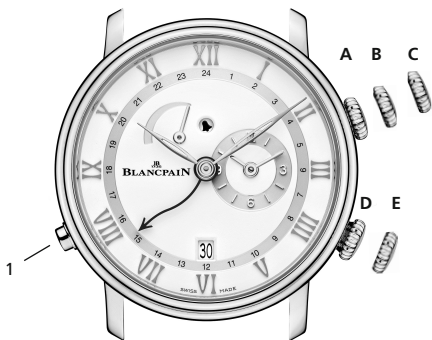

6640

THE CROWN AT 2 O'CLOCK HAS THREE DISTINCT POSITIONS:

Position A, crown in manual-winding position.

Position B, enabling adjustment of the GMT (local time) and fast date adjustment (with only the hour hand turning); in this position, the time-zone hours may be set and the date may be corrected in both forwards and backwards directions.

Position C, crown pulled out to time-setting position, enabling adjustment of the hours and minutes.*

THE CROWN AT 4 O'CLOCK HAS TWO DISTINCT POSITIONS:

Position D, crown in normal position.

Position E, enabling adjustment of the alarm by turning the crown in a counter-clockwise direction.

Pusher a (located at 8 o'clock), alarm trigger pusher serving to lock or activate the alarm by modifying the aperture icon with the "ON" bell or with no icon, meaning it is "OFF".

*** SETTING THE WATCH TO TIME:**

It is advisable, when setting the time, to synchronise the three central hands:

1. Pull the crown at 2 o'clock to position C and set the hour hand (home-time hours) to 24.
2. Push this crown back in to position B and make the hour (local time) jump until the date changes. Return to position C to adjust the hours and minutes.
3. Push the crown back in to position A.

IMPORTANT

The alarm hand is interdependent with the local time-zone display indicated by the large hour and minute hands. The alarm rings every 12 hours so long as it is not in the "OFF" position.

TRIPLE-BLADE FOLDING CLASP (WITH PRONG)

Only Blancpain wristbands specially designed for this folding clasp should be used. For your safety and comfort, we advise you to have your new clasp fitted by an authorised Blancpain retailer. You can always then adjust the length of the wristband yourself.

OPENING

To open the fastening, place one finger on each side of the clasp and pull it upwards (Fig. 1). Proceed in the same manner to open the other blade (Fig. 2).



Fig. 1

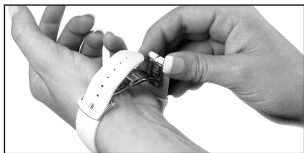


Fig. 2

CLOSING

Slip your Blancpain watch on your wrist and close the folding blades as indicated on figures 3 and 4.



Fig. 3



Fig. 4

ADJUSTING THE WRISTBAND:

Slide the section of the wristband into the clasp and insert the prong into the desired hole (Fig. 5). Move the prong to another hole if necessary.



Fig. 5