


JB
1735
BLANCPAIN
MANUFACTURE DE HAUTE HORLOGERIE

Your watch



TRADITIONAL CHINESE CALENDAR, GREGORIAN CALENDAR, MOON PHASES, UNDER-LUG CORRECTORS, SECURED MOVEMENT, SELF-WINDING CALIBRE 3638, UP TO 7-DAY AUTONOMY.

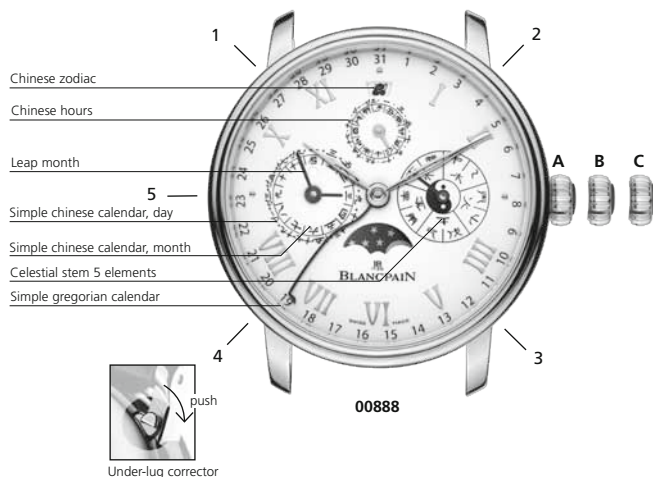

THE CROWN HAS THREE DISTINCT POSITIONS:

Position A, crown in manual-winding position.

Position B, crown pulled out, serves to correct (in one direction only) the zodiac sign/element combination.

Position C, crown pulled out to time-setting position, enabling adjustment of the hours, minutes, Chinese time as well as serving to stop the seconds hand.

Push the crown back in to position A once the time has been set, or after correcting the zodiac sign/element combination.

FAST ADJUSTMENT OF THE CHINESE AND GREGORIAN CALENDARS:

Correctors 1, 2, 3 and 4 located under the case lugs, as well as corrector 5 positioned beneath the case middle, enabling all adjustments of the Chinese and Gregorian calendars. The correctors may be activated by depressing them using a finger or the tool supplied with the watch.

Pull the crown out to position C and turn the hour and minute hands clockwise until the date jumps, and then position them at noon.

1. Activate corrector 1 located at 11 o'clock to index the required day of the Chinese calendar
2. Activate corrector 5 at 9 o'clock up to the required Chinese month (+1 month in a leap year)
3. Activate corrector 4 at 7 o'clock to indicate that it is a leap-year month
4. Pull crown out to position B and activate it until reaching the required zodiac sign/element combination
5. Activate corrector 2 located at 1 o'clock to index the required day of the Gregorian calendar
6. Activate corrector 3 located at 5 o'clock to adjust the moon phases: place the disc in the full-moon position. Check the date of the last moon phase using a calendar and press the corrector the same number of times as the days that have elapsed since the last full moon.

IMPORTANT

Corrections of the day or night may be performed at any time without any risk of damaging the mechanism. Nonetheless, when the moon is changing position between 3 and 5 pm, the moon-phase display will only jump the current phase. To move the disc several moon phases forward, the adjustment must be performed outside this time-frame.

For all other indications (Chinese date, Gregorian day), during the transition phase between 9 pm and 1 am, the indications will only jump the current date and day. To move them several days forward, the adjustments must be performed outside this time-frame.

TRIPLE-BLADE FOLDING CLASP (WITH PRONG)

Only Blancpain wristbands specially designed for this folding clasp should be used. For your safety and comfort, we advise you to have your new clasp fitted by an authorised Blancpain retailer. You can always then adjust the length of the wristband yourself.

OPENING

To open the fastening, place one finger on each side of the clasp and pull it upwards (Fig. 1). Proceed in the same manner to open the other blade (Fig. 2).



Fig. 1



Fig. 2

CLOSING

Slip your Blancpain watch on your wrist and close the folding blades as indicated on figures 3 and 4.



Fig. 3



Fig. 4

ADJUSTING THE WRISTBAND:

Slide the section of the wristband into the clasp and insert the prong into the desired hole (Fig. 5). Move the prong to another hole if necessary.



Fig. 5