

JB
1735
BLANCPAIN
MANUFACTURE DE HAUTE HORLOGERIE

Your watch



**8-DAY PERPETUAL CALENDAR, MOON PHASES, LEAP
YEAR INDICATION, SMALL SECONDS, UNDER-LUG
CORRECTORS, SECURED MOVEMENT, SELF-WINDING
CALIBRE 5939A, UP TO 8-DAY AUTONOMY.**



Under-lug corrector

6659

THE CROWN HAS TWO DISTINCT POSITIONS:

Position A, crown in manual-winding position.

Position B, crown pulled out to time-setting position, enabling adjustment of the hours and minutes.

Push the crown back in to position A once the time has been set.

ADJUSTING THE PERPETUAL CALENDAR:

Correctors 1,2, 3 and 4 located beneath the lugs enable adjustment of the perpetual calendar and may be operated with one finger.

1. Set the time to midday, not midnight (if it is midnight, the date jumps!).
2. Set the date to the 1st, corrector 1, located sous la corne at 11 o'clock.
3. Set the month and the leap-year indicator (L=leap year), using corrector 2 beneath the lug at 1 o'clock
4. Set the date to that preceding the desired date, using corrector 1, located beneath the lug at 11 o'clock.
5. Set the day to that preceding the desired day, using corrector 3, located beneath the lug at 7 o'clock.
6. Adjust the moon phases: corrector 4, located beneath the lug at 5 o'clock. Place the disc in the full-moon position, check the date of the last full moon using a lunar calendar and press corrector 4 the same number of times as the days that have elapsed since the last full moon.
7. Set the correct date.
8. Set the correct day of the week.
9. With the crown in position B, adjust the hours and minutes.

Push the crown back in to position A once the adjustments have been made.

TRIPLE-BLADE FOLDING CLASP (WITH PRONG)

Only Blancpain wristbands specially designed for this folding clasp should be used. For your safety and comfort, we advise you to have your new clasp fitted by an authorised Blancpain retailer. You can always then adjust the length of the wristband yourself.

OPENING

To open the fastening, place one finger on each side of the clasp and pull it upwards (Fig. 1). Proceed in the same manner to open the other blade (Fig. 2).



Fig. 1

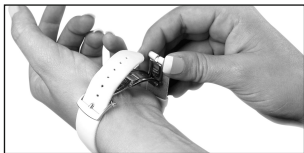


Fig. 2

CLOSING

Slip your Blancpain watch on your wrist and close the folding blades as indicated on figures 3 and 4.



Fig. 3



Fig. 4

ADJUSTING THE WRISTBAND:

Slide the section of the wristband into the clasp and insert the prong into the desired hole (Fig. 5). Move the prong to another hole if necessary.



Fig. 5